

What's an EPG?

Note: EPG = Electronic Program Guide and is a list of TV programs

Currently the EPG is populated with data broadcast by the networks.

You may need to select each channel for a few seconds to populate the EPG if No EPG is displayed. If that doesn't help, the network is not broadcasting an EPG for that channel.

1. Switch on the Homecast PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. Press the **EPG** button on the remote to bring up the **EPG**.



3. Press the **▲▼◀▶ ARROW** keys to move around the **EPG** to show more services or later programs.
4. To change to a channel, press **OK** while the service you want is highlighted and it will be displayed in the thumbnail view (top left corner).
5. To set a **Timer**, highlight the show you wish to record and press the **Red** button on the remote to take you to the **Timer List** in the **Reservation Window**.
6. The Start / End times and channel for the show you selected will be entered in the Timer line. To commit the timer, press **OK**, and then press **Exit** to return to the **EPG**.

(refer to "How do I set, edit or delete a Timer?" for more information about setting timers) .

Note: You should see an orange bar in the time-line at the top of the EPG window to indicate a timer is set for that time.

7. To scroll the **information** shown about a program, highlight the program and press the **Info** button on the remote (below the **Blue** button). Information is not always available for every program.
8. Press the **EXIT** button on the remote to resume normal viewing.

FOR MORE DETAILED INFORMATION REFER TO PAGE 63 OF THE MANUAL