

How do I setup and use Favorites?

Note: Favorites are an easy way to “group” channels together (in a HD Group and a SD Group etc) so that it is easy to find the channel you want. Once you’ve grouped the channels, you can list them with the FAV button. The Homecast PVR allows you to have up to 8 groups. You can put the same channel in as many favorite groups as you like.

1. Switch on the Homecast PVR and wait for a picture to show on the screen. If a picture doesn’t appear, your PVR may need to scan your channels first – See “How do I do a Channel Scan?”
2. Press the OK button on the remote, then press the Yellow Fav button and use the ▲▼ARROW buttons to highlight All and press OK.
3. Using the ◀▶ARROW buttons on the remote, navigate to the Favorite icon at the bottom of the channel list. The Favorite icon resembles a pair of chess pawns.



4. Use the ▲▼ARROW buttons to highlight a channel you want in a favorite group and press OK

5. Use the ▲▼ARROW buttons to highlight the favorite group you want to channel to be in and press OK button to enter it. A tick should appear in the checkbox next to the favorite name.

6. Continue this process to add this channel to more groups.

7. When you’ve finished selecting the favorite groups for that channel, use the ◀ARROW button to navigate to the channel list, then the ▲▼ARROW buttons to highlight another channel and repeat the process of adding it to the favorite groups.

8. When finished press the Exit button.



9. Bring up the Favorite Group list by pressing the Yellow Fav button on the remote; use the ▲▼ARROW buttons to highlight the favorite group and press OK, and then use the ▲▼ARROW buttons to select the channel you wish to view and press the OK button.

FOR MORE DETAILED INFORMATION REFER TO CHAPTER 8.4.4 IN THE MANUAL

