

What is an EPG?

Note: EPG stands for Electronic Program Guide, which is an onscreen listing of the current and upcoming TV programs for up to the next week. EPG data is broadcast by the TV networks and is available for most channels.

If the 240v power to the Homecast has been turned off, or you have not viewed some channels recently, you may need to select one channel from each network for up to a minute to populate the EPG with program information for that network's channels. If a particular channel has no data, then the TV station is not broadcasting EPG data for that channel.

1. Switch on the Homecast PVR and wait for a picture to display on the TV screen. If a picture does not appear, your PVR may need to have a channel scan performed – See “How do I do a Channel Scan?”
2. Press the EPG button on the remote to bring up the EPG.



3. Use the ▲▼◀▶ ARROW buttons to move around the EPG, to display more services, or programs for a later timeslot. Use the Vol+ and Vol- buttons to jump forwards and backwards 24 hours at a time, to display programs that are on later in the week.
4. To change to a channel press the OK button while the desired channel is highlighted (it will be displayed in the small window in the top left corner).
5. To set a Timer, highlight the program that you wish to record and press the Green button on the remote control. This will open the Timer List in the Reservation Window with a new timer pre-set for the selected program.
6. The Start and End times and Channel for the program that you selected will already be entered into the new Timer dialog. Press the OK button to save the new timer, and then press Exit to return to the EPG. (Please refer to “How do I set, edit or delete a Timer?” for more information about setting timers).

Note: You should see an orange bar in the time-line at the top of the EPG window to indicate a timer is set for that timeslot.

7. To scroll the displayed information for the highlighted program, press the Info button on the remote (below the Blue button). Information is not always available for every program.
8. Press the EXIT button on the remote control to exit the EPG and resume normal viewing.

FOR MORE DETAILED INFORMATION REFER TO CHAPTER 8.9 IN THE MANUAL