

## How do I Change Channels?

1. Switch on the Homecast PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See “How do I do a Channel Scan?”

2. The remote has an up/down toggle button labelled **P**, located middle, right hand side. Press the **+** or **-** to toggle up and down the channels.

The channel name will be displayed briefly in the Information Box at the bottom of the screen.



3. You can also press the **OK** button on the remote to bring up a list of the available channels. Use the **ARROW** buttons to navigate the list and press **OK** to select the channel.



*Note: You can press the **TV / Rad** button to toggle between TV channels and Radio Channels.*

FOR MORE DETAILED INFORMATION REFER TO CHAPTER 8 IN THE MANUAL