

How do I Change the Volume?

1. Switch on the Homecast PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. The remote has an up/down toggle button labelled V located on the middle left hand side. Press the + or - to increase and decrease the volume.

The volume level will be displayed on the screen.



3. There is a MUTE button located above the blue button on the remote. Pressing it will toggle the sound output on and off.

Note: The mute will not affect digital output audio, use the TV or Amplifier mute.

The mute symbol will be displayed on the screen



FOR MORE DETAILED INFORMATION REFER TO CHAPTER 8 IN THE MANUAL