

# How do I set, edit or delete a Timer?

*Note: You can set two overlapping timers on the Homecast as it has two tuners.*

1. Switch on the Homecast PVR and wait for a picture to show on the screen. If a picture doesn't appear, your PVR may need to scan your channels first – See "How do I do a Channel Scan?"
2. Press the **MENU** button on the remote and use the **◀▶ ARROW** buttons on the remote to select the **Channel** menu and then use the **▲▼ ARROW** buttons to highlight **Timer** and press **OK**.
3. Press the **Green** button on the remote to **Add** a timer (or skip to the end to edit or delete a timer).
4. Use the **▲▼ ARROW** buttons to select the type of recurrence you want to use and then press **OK**.



## Reserved Channel Icon Meanings

- 1** ONCE
- W** WEEKDAYS
- S** WEEKENDS
- 7** WEEKLY
- 30** DAILY



5. If needed, use the **◀▶ ARROW** buttons to highlight **Date** and then use the number buttons to enter the date.
6. Use the **◀▶ ARROW** buttons to highlight **Start** and then use the number buttons on the remote to enter the desired **Start Time**.
7. Use the **◀▶ ARROW** buttons to highlight **End** and then use the **ARROW** buttons to enter the desired **End Time**.
8. Use the **◀▶ ARROW** buttons to highlight **Channel Name** and then use the **▲▼ ARROW** buttons to select the **Channel** and press **OK**.
9. Press **OK** to save the timer.
10. Press the **Exit** button on the remote to resume normal viewing.



To **Edit** a Timer use the **▲▼ ARROW** buttons to highlight it and press the **Red** button. Then follow steps 4 to 9.

To **Delete** an existing Timer use the **▲▼ ARROW** buttons to highlight it, then press the **Yellow** button.

To **View** the order in which the timers will occur, press the **Blue** button

*Note: In steps 5, 6 and 7 you can use the **▲▼ ARROW** buttons instead of the number buttons to change the date and the start and end times.*

FOR MORE DETAILED INFORMATION REFER CHAPTERS 9.3.5 AND 9.3.6 IN THE MANUAL